

Version:TR9B 1.6(12/2023)

Ultra-large colorful screen capacitive touch LCD smart thermostat

- √ The device can obtain local weather condition and outdoor temperature (optional)
- √ Customized exclusive temperature plan up to 6 events allowed to set per day
- √ Sail-shape curved design fashion, elegant and enduring
- √ Ultra-large screen -better user interaction experience
- √ 485 modbus and room card linkage customized equipment (optional)

Parameter


Supply voltage	AC100~240V; 50/60Hz
Power consumption	1W Max (Wi-Fi 3W Max)
Temp. setting range	5~95°C (41~99°F)
Floor limited range	20~90°C (68~99°F)
Temp. Dif.	0.5~10°C(1~10°F), Factory setting ±1°C
Ambient temperature	-5~50°C (23~99°F)
Protection level	IP20
Shell material	Anti-Flammable PC


Product Overview

This series of thermostat has Floor Heating, Fan Coil, and Integrated version, meeting the requirements under different scenarios.

Version	System mode	Model	Application
Floor		EP	Built-in & floor sensor, floor limit sensor + Weekly programming
heating	Heating	WP	A NC/NO dual-output + Weekly programming
		WPB	A NC/NO dual-output + Weekly programming+ Potential-free output
Fan Coil	Heating /Cooling /	AC2	Timer task + 2-pipe system
	Ventilation	AC2-485	Timer task + 2-pipe system + 485Modbus (optional)
		AC4	Timer task + 4-pipe system + 485Modbus (optional)
Integrated	Heating / Cooling / Ventilation/Floor heating / Floor heating + Heating	AWY	Floor heating & fan coil, weekly programming + Potential-free output + Timer task + 485Modbus (optional) + Door card (optional)

Display Symbols

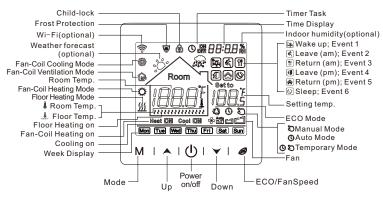

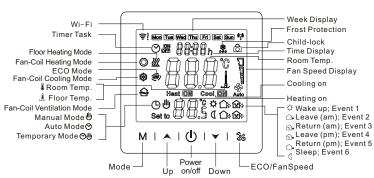

Temperature Control Mode(Floor Heating/Integrated)

ال Manual Mode

Thermostat works based on manually-set temperature, disconnecting from auto mode.

Weekly-circled programme, up to 6 heating events can be set per day. Heating events, workdays and temperature can be separately customized based on personal routines.

Thermostat works based on manually-set temperature temporarily and then shifts back to auto mode till next event.

User Operation

Power on/off: Press "(1)" shortly to turn on/off the thermostat.

Auto-mode: Press "M" for 3 seconds to edit auto-mode settings. (Floor Heating/Integrated)

Timer task: Press "%" for 3 seconds to edit timer task. (Fan Coil/Integrated)

Time setting: Press "@" for 3 seconds to set time. (Floor Heating)

Press "%" twice for 3 seconds to set time. (Automatic time synch for Wi-Fi version)

Temp setting: Press "A" or "∀" shortly to change setting temperature by 0.5°C.

Child-lock: Press "A" + "♥" for 3 seconds to activate child-lock.

System mode: Press "M" shortly to switch cooling/heating/ventilation. (Fan Coil)

Press "M" shortly to switch cooling/heating/ventilation/floor heating/floor

heating + heating. (Integrated)

Temp control mode: Press "M" shortly to switch manual/auto mode. (Floor heating)

Press "%" shortly to switch manual/auto mode. (Integrated, floor heating) Fan speed setting: Press "%" shortly to adjust fan speed.(Fan Cail/Integrated)

ECO mode: Press"❷"shortly to set to ECO mode 18°C(64°F). (Floor heating)

Advanced Setting (Usually for Professional Technicians)

Code Meaning	" A " or " ∀ "		Integrated	Fan Coil			Floor Heating			
Coue	Wicaring	A 01 V	Value	AWY	AC2- 485	AC4	AC2	EP	WP	WF
00	Postal address (optional)	Adjustment range 0x00~0xFA	00	1	√	4	×	√	4	٧
01	Temp. calibration	−9. 9~9. 9°C (−9~9°F)	−3°C	1	√	4	4	√	4	٧
02	Temp. Dif.	0. 5~10°C (1~10°F)	±1°C	√	√	√	√	√	√	٦
03	Temp. upper limit	5~95°C (41~99°F)	50°C	√	√	1	√	√	√	4
04	Temp. lower limit	5~47°C (41~99°F)	5°C	√	√	1	√	√	√	4
05	Frost protection	ON: frost protection on OFF: frost protection off	OFF	√	√	√	√	√	√	4
06	Temperature unit	°C/°F	°C	√	√	√	√	√	√	١,
07	Sensor selection	IN: Controlled by built-in sensor OUT: Limited by floor sensor ALL: Controlled by built-in sensor and limited by floor sensor	IN	4	×	×	×	√	4	*
80	Floor limited Value	20~90°C (68~99°F)	35°C	√	×	×	×	1	4	4
09	Weekly programming setting	12345: 5/2 week mode 123456: 6/1 week mode 1234567: 7/0 week mode	12345	4	×	×	×	√	4	~
10	Fan control settings	00: Fan speed controllable 01: Fan speed uncontrollable	00	4	4	4	4	×	×	×
11	Delay time of outputs	0~5min	0	✓	×	×	×	4	4	4
12	Child-lock	OD: Child-lock inactivate when screen off, lock all when child-lock activate O1: Child-lock activate when screen off, lock all when child-lock activate O2: Child-lock activate when screen off, lock all except Fan Speed, Up and Down when child-lock activate O3: Child-lock activate when screen off, lock all except Power on/off when child-lock activate Child-lock activate when screen off, lock all except Power on/off when child-lock activate	00	7	7	4	~	√	7	~
13	Boot Status	00: Power OFF 01: Power ON 02: The last status before power loss	02	4	4	4	4	√	4	4
14	Room card status	00: turn off room card function 01: set to ECO temp. after pulling room card out 02: stay power-off after pulling room card out	00	7	1	×	×	×	×	>
15	Room card heating ECO temp.	10~21°C (50-69°F)	18°C	4	4	×	×	×	×	>
16	Room card cooling ECO temp.	22~32°C (72-89°F)	26°C	√	√	×	×	×	×	>
17	Fan coil mode setting	00: Cooling and heating 01: Cooling only	00	4	4	4	4	×	×	>
18	Weekly programming for Integrated	00: turn on 01: turn off	01	4	×	×	×	×	×	>
19	Reset	Press "A"for 3 seconds to reset	7	J	1	1	J	J	7	Γ.


Auto-mode Setting (Floor Heating / Integrated)

Press "M" for 3 seconds to edit auto-mode setting.


Events			Time		Temperature		
		Symbols	Default value	Modify	Default value	Modify	
Workdays	1	⊯ /☆	06:00	D	20°C (68°F)		
	2	€ / 🗘	08:00	Press	15°C (59°F)	Press	
	3	₩ / 🖦	11:30	"△"	15°C (59°F)	"△"	
	4	₩ / 🕪	12:30	or	15°C (59°F)	or	
	5	⋒ / 🗘	17:00	01	22°C (72°F)	OI	
	6	©/(22:00	" Y "	15°C (59°F)	"∀"	
Weekends	1	1 / ⇔	06:00	,	20°C (68°F)	*	
	2	©/(20:00		20°C (68°F)		

Timer Task Setting (Fan Coil / Integrated)

 Press "ੴ" for 3 seconds to enter timer task setting; press "M" to change settings; press "A" or "∀" to adjust parameters; press "(I)" to save and exit.




Dimensions (Unit: mm)

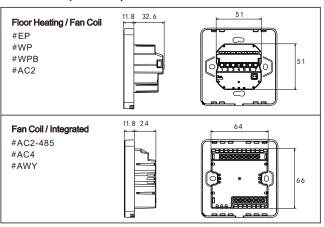


Mounting Steps

The thermostat adopt pre-guide and limited snap-fit design. It is easy to mount.

 
1) Release front cover by inserting a head screw-driver into bottom crack.



- Insert the wires and then fix these wires with screws. Suggested wire-stripping length is 7-9mm.
- Mount backing plate into wall-cassette, put screws and then fix thermostat. Make sure that the thermostat is fixed without deformation. Suggested torque is 0.2~0.4N.m (2.0~4. 1kgf.cm).

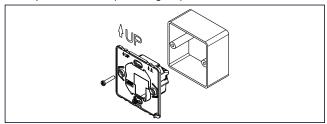

 4) Re-mount the front cover via snap-fit connection.




Sensor failure

Please select work mode of sensors correctly. When it shows E0/E1 error, thermostat will stay power-off till the error is eliminated.E0: built-in sensor is short-circuited or disconnected. E1: floor sensor is short-circuited or disconnected.

Connecting Diagram

The thermostat operates in full capacity in areas with the altitude of less than 2500 above sea level. Power rating of external load should be less than or equal to 80% rated power of the thermostat in areas with altitude of 2500m to 4200m.

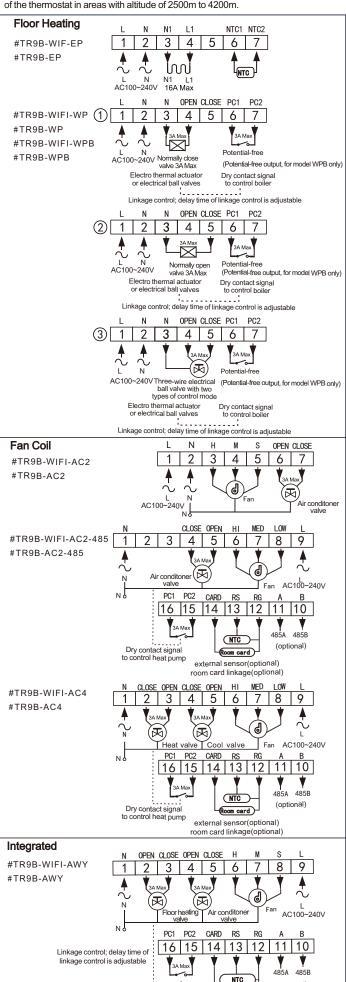


Dry contact signal

to control heat pump

(Room card)

room card linkage(optional)

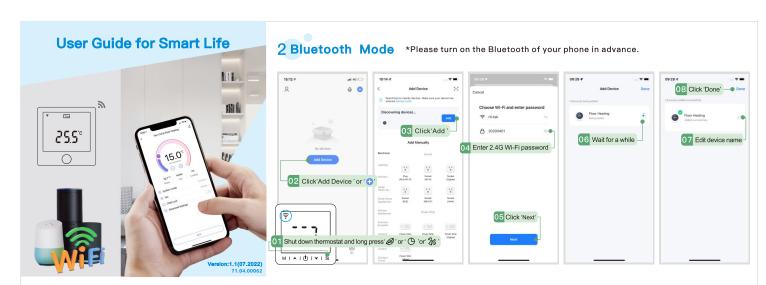

1 Sign Up & Log in






①Scan the QR code above, or search "Smart Life" in Apple APP Store and Google Play, to download Smart Life app.

②Sign up or log in directly if you have an account.

3 AP Mode

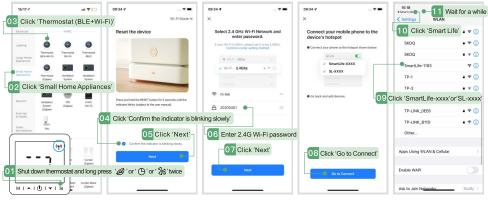











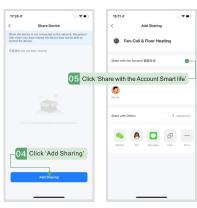

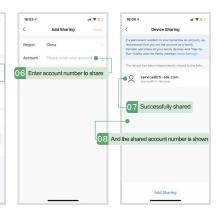

07:00 ON

5 App control interface

